This is what's included in your **Pro Certified Lifetime Limited Warranty:**



ENGINE

Cylinder block Cylinder head(s) Exhaust manifold(s) Flywheel or flexplate Harmonic balancer

Intake manifold Intercooler

Oil pan

Oil pump Ring gear Rotor housings and internal parts Timing chain(s) or belt(s)

Timing chain or belt tensioner(s) and timing chain or belt cover

Timing gears

Turbocharger or supercharger housing(s) and internal parts

Valve cover(s)

Wastegate Water pump

TRANSMISSION



Transfer case and internal parts

Transmission case

DRIVETRAIN ASSEMBLY



Drive shaft yokes Drive shaft(s)

Axle shafts

Final drive and axle housing(s) and internal parts

Front- and rear-wheel drive

Universal and constant velocity joints

This overview of covered parts may not be all-inclusive. Please see Limited Warranty document for details.

Administered by



4150 N. Drinkwater Blvd. Suite 400 Scottsdale, AZ 85251 (800) 345-0191

This is not a contract. Coverage provided by the manufacturer's warranty supersedes service contract. Please see service contract for obligations, conditions, limitations, exclusions and statespecific provisions that may change your coverage or benefits. This product is not insurance. The product being offered is a service contract and is separate and distinct from any product or service warranty which may be provided by the manufacturer, importer, or seller, Service Contract Providers: Dealers, Continental Service Provider, Inc.: Continental Service Plan, Inc.: or

in Florida by CNA National Warranty Corporation-Florida, at the address shown above, Florida Company #60098.

> ©2024 CNA National Warranty Corporation 9443L (05/24)



EXPAND YOUR COVERAGE

Enhance your limited warranty and help reduce repair costs.



Enhance Your Vehicle's Lifetime **Limited Powertrain Warranty Coverage**

Your Pro Certified Lifetime Limited Warranty covers repairs for mechanical failures of powertrain components. By adding a Pro Certified Lifetime wrap, you can drive with confidence that comes from having our comprehensive coverage.

INCLUDED WITH PRO CERTIFIED LIFETIME WRAP COVERAGE



Roadside assistance

Call our toll-free number for 24/7 signand-drive service offering up to \$50 per occurrence or up to \$150 for towing. Or, you can call your own provider and we will reimburse you up to these dollar limits.



Rental car reimbursement

\$50 per day with a maximum of \$350 total for a rental vehicle when a covered breakdown occurs.



Travel and lodging reimbursement

Meals and lodging up to \$100 per day, with a maximum of \$300 per occurrence, if you are stranded more than 100 miles from home due to a covered breakdown.



Expand your coverage with a Pro Certified Lifetime Wrap!



With the advanced technology in today's vehicles, repairs can be costly and unpredictable. Even one mechanical breakdown could result in thousands of dollars in unplanned expense. Our valuable wrap coverage can help reduce or eliminate potentially high and unexpected repair costs for as long as you own your vehicle.

SUSPENSION 🔊

Ball joints Coil springs Control arm bushings Control arm shafts Hub bearings King pin bushings King pins

Leaf spring bushings Leaf spring shackles Leaf springs Lower control arms MacPherson strut cartridges MacPherson strut housings Shocks Spindle supports Spindles Spring shackles

Stabilizer bar links Stabilizer bars Steering knuckles Strut bar bushings

Stabilizer bar bushings

Strut bar links Strut bars Strut mounts

Torsion bar mounts Torsion bars

Track bar bushings Track bar links

Track bars

Upper control arms Wheel bearings

ELECTRONIC SUSPENSION

Air suspension bags Air suspension compressor Air suspension lines Air suspension fittings Variable suspension air

Variable suspension control processor Variable suspension sensors

Variable suspension struts Variable suspension switches

STEERING

Ball guides

Bolts Bushings

Ball nut

Center link Control rings Control valve

Cups Drag link Filler cap Idler arm

Lock ring Locknuts

Pinion Pinion seal

This overview of covered parts is not all-inclusive.

Pinion shaft adjuster Pitman arm

Pitman shaft Pitman shaft adjuster Pitman shaft seal Pump housing Pump pressure plate Pump reservoir Pump reservoir o-ring Pump shaft

Pump vanes Rack bellows

Rack end seals Rack housing

Rack mounts Rack shaft

Rack voke Relay rod

Roller balls Shims

Snap rings Spool valve

Steering column bearings Steering column coupling Steering column shaft

Steering fluid cooler Steering fluid cooler lines

Steering gear housing Steering pump mounting bracket

Steering pump pulley Tie rod ends

Tie rods Tilt wheel mechanism

Washers Worm gear adjuster Worm shaft

Yoke spring

FOUR-WHEEL STEERING

Center shaft Power cylinder Steering gear housing Steering pump

Steering rack assembly Stepper motor Stepper motor control

Stepper motor sensors

INTERIOR CLIMATE

processor

A/C compressor A/C compressor clutch A/C compressor coil A/C compressor mounting bracket A/C compressor pulley A/C muffler Accumulator Blower fan motor

Condenser Control cables

Control switch Ducts

Evaporator Expansion valve Heater control valve

Heater core High/low cut-off switches

Idler pulley Idler pulley bearing

Idler pulley mounting bracket Manifold

Orifice tube Plenum door motors Plenum doors

POA valve Programmer Receiver-dryer

Schrader valve caps Schrader valves Serpentine belt tensioner

Serpentine belt tensioner Serpentine belt tensioner pulley

Temperature sensors

BRAKES

Accumulator

Backing plate

Brake pedal

Caliper seals

Master cylinder

Metering valve

Brake adjusters



MANUAL & POWER **BRAKES**

Alternator diodes Alternator pulley Brake pedal apply pin Alternator rotor Brake pedal lever Brake pedal pivot Brake light switch Brake wear sensors Defroster switch Door lock switch Combination valve Disc brake calipers Headlight switch Hold down nails Horn switch Hold down springs Ignition switch Hydro-boost unit Map light switch Master cylinder seals Mirror switch Metal brake line fittings Metal brake lines Parking brake adjuster Rectifier bridge Starter armature Starter brushes Starter bushings

Starter motor

Starter motor case

Sunroof motor switch

Wiper delay controller

Wiper motor linkage

Starter solenoid

Voltage regulator

Washer reservoir

Washer pump

Wiper motors

Wiper switch

Wiring harnesses

Parking brake cable Parking brake lever Parking brake pedal Parking brake ratchet assembly Pressure differential switch Proportioning valve

Residual pressure check Return springs

Self-adjuster mechanism Vacuum booster Wheel cylinder seals Wheel cylinders

ABS BRAKES

ABS booster/pump ABS control processor ABS dump valve ABS master cylinder ABS sensors ABS solenoids

POWERTRAIN ELECTRONICS

ELECTRICAL Alternator bearings Alternator brushes Alternator field coils Alternator housing Alternator mounting bracket Backup light switch Glove box light switch Manually operated switches Neutral safety switch Power seat switch Power window switch Starter drive Starter field windings

> Vehicle speed sensors FUEL SYSTEM

Vacuum advance

Accelerator cable Accelerator linkage Accelerator pedal Fuel fittings Fuel injection distribution Fuel injection pump Fuel injectors Fuel level sending unit Fuel pressure regulator

Fuel pump

Fuel tank

Fuel tank filler neck

Air control solenoid Air flow meter Air regulator valve Barometric pressure Coolant sensor Cooling fan control processor Cooling fan sensors Crankshaft position sensor Distributor Distributor gear EFE heater Hall effect switch

IAC motor

Ignition coil Knock sensor Map sensor

Mechanical advance Mixture control processor Mixture control sensors Oxygen sensor

Pickup coil Pole piece

Throttle position sensor Timing control processor Timing control sensors

selector Transmission shift control processor Transmission shift control sensors

> Proximity pass key* Proximity pass sensor*

Rain-sensing wiper sensors*

Television3

Fuel tank o-ring

Throttle body Throttle body gaskets Throttle linkage

INTERIOR

Throttle shaft

Amplifiers Cruise control assembly Cruise control cables Cruise control module Cruise control servo Dash-mounted CD player DVD player* Digital dash display Electronic climate contro head

Intelligent cruise control

Magnetic tape player Manual climate control

Navigation system* Near-object avoidance receivers, sensors and transmitters*

Rear compact disc Rear-view camera*

function computers

CONVENIENCE

Metal fuel lines Throttle plate

ELECTRONICS

Heads-up display projector

sensors and transmitters

Radio

Rear audio system*

Trip/mileage/engine Video cassette player* **ACCESSORIES**

Horn

Electronic video game* Graphic equalizer Heads-up display control

Anti-theft system components Bluetooth connectivity Convertible top frame Heated seat elements Heated steering wheel

Horn relay Keyless entry module Power antenna motor Power door lock actuator Power door lock motor Power door lock relays Power headlamps motor Power mirror motors Power seat motor Power sunroof motor

Hood release cable Hood springs Power tailgate motor Hood supports Power tailgate solenoids Inner door handles Power top motor LED lighting

Power trunk motor Liftgate supports Power trunk solenoids Manual seat track assembly Power window motor

Rear window defogger Rear window defroster Remote entry receiver

Remote entry sender

Motors

Solenoids

Switches

Fan

Fan clutch

Fan motor

Fan shroud

Radiator

brackets

Thermostat

COOLING

Cooling fan relav

Radiator mounting

Coolant recovery tank

Power seat cables **MEMORY SEAT &** Power seat track assembly STEERING

Power seat transmission Activator switches Seat back release Control processor mechanism Sun roof cable and guides

Trunk hinges Trunk latch Trunk lid striker plate Trunk lid supports

Trunk torsion bars

Window regulators

Window handles

VEHICLE **HARDWARE**

Ash tray and bracket

Door hinges

Door linkages

Door strikers

Glove box latch

Hatch hinges

buckets

Gas tank door latch

Gas tank door release

Glove box lock assembly

Headlamp mounting

Hood latch and hinges

Outer door handles

sockets

Parking and side lamp

Power seat adjusters

Bumper impact absorbers

Courtesy light switches

OCCUPANT RESTRAINT

Seat belt(s) Seat belt buckles/latches Seat belt buckle switch Seat belt buckle retractors/tensioners Seat belt motors Seat belt pretensioner

Seat belt reminder buzzer

Seat belt reminder lamp

SPORT PACKAGE

Auxiliary fuel tank Bed liner except for warpage Bed-mounted fifth-wheel hitch

Brush guards Cargo lamp

Cargo tie-downs Headlight grills Pop-out or sliding side/ rear window latches

Power winch motor Power winch rollers

Rail protectors Running boards Running light bodies and

Skid plates Spare tire carrier Spare tire swing arm Step bumpers and mounting brackets

Swing-away mirror arms

Tailgate lock and cables

and mounts Tailgate handle Tailgate hinges

Tow hooks Trailer hitch receiver



Axle gasket(s) Axle seal(s) Cam housing gasket(s) Compressor gaskets Compressor line o-rings Compressor seals CV joint boots Cylinder head gasket(s) Differential gasket(s)

Exhaust manifold gasket(s) Front crankshaft seals

Front pump seal(s) Hub or wheel bearing seal Intake manifold gasket(s) Oil pan gasket Output shaft seal

Pinion seal Rear main seal

Shifter seal Speedometer cable seal Steering pump shaft seal Timing cover gasket

Transfer case seal(s) Transmission pan gasket Valve cover gasket(s)



Airbag fault/warning light Airbag module Impact sensor Occupancy sensors Restraints/airbag control

module

